

ZAMRY Echem Analyst™ Software

Echem Analyst''' Software	1
Introduction to This Guide	2
General Information and Overview	3
Installation	3
File Formats	
To Open a Gamry Data File	3
Working with Plots in Echem Analyst	
Changing the Axes on a Plot (the Curve Selector):	8
Selecting Portions of a Curve for Analysis	8
Selecting Portions of a Curve for Analysis	
Cutting and Pasting Images and Data	
To Get On-Line Help:	11
Common Tools and Tabs	13
Accessing Common Tools	
List of Common Tools	13
Experimental Setup	15
Experimental Notes	
Hardware Settings	17
Open Circuit Voltage (Corrosion Potential) Data	
Analysis of Cyclic Voltammetry Data	20
Cyclic Voltammetry Special Tools	
Integrating the Voltammogram	
Modeling Polarization Resistance Data	
Polarization Resistance Special Tools	
Finding the Polarization Resistance	
Modeling Potentiodynamic (Tafel) Data	
Tafel Fit	
<i>E</i> Log / Fit	27
Modeling EIS Data	28
Bode and Nyquist Plot View	28
EIS Special Tools	29
Fitting the Data to the Equivalent-Circuit Model	33
Appendix	
Headings in Data-File Columns	36
Current Conventions According to Framework™ and Echem Analyst	
To Edit Visual Basic Scripts:	
Simulating an EIS Curve	
Index	40

Windows®, Excel®, and Powerpoint® are registered trademarks of Microsoft Corporation. Origin® is a registered trademark of OriginLab Corporation. DigiSim® is a registered trademark of Bioanalytical Systems, Inc. Contents of this manual copyright © 2011 by Gamry Instruments.

Introduction to This Guide

The Echem Analyst[™] is Gamry's dedicated data-analysis program, the companion to Gamry's data-acquisition program called Framework[™]. Data files generated by experiments in Gamry Framework then can be analyzed in the Echem Analyst. The Echem Analyst is a single program that runs data-analysis for all types of experiments, such as those used in DC Corrosion, EIS and Physical Electrochemistry.

The Echem Analyst is designed with the specific functions to make data analysis as straightforward as possible. This manual will explain the most common analysis routines. The tools discussed here in the examples are common to many data files created by other experiments. This document is a guide, and is not intended to have the same scope as the on-line help or a complete operating manual. In order to create a concise document, we assume the user has a working knowledge of Windows®-based applications. Details on common functions, such as opening, saving, and closing files, are intentionally ignored, so as not to obscure the goal of this guide.

This textbox indicates a helpful hint to know about Echem Analyst.

General Information and Overview

Installation

Echem Analyst installs separately from other Gamry software. If Echem Analyst is not installed yet, you can find it on the CD-ROM, or—if you already own one of our potentiostats—on our website at www.gamry.com.

You may install copies of the Echem Analyst on multiple computers. Often users prefer the convenience of performing data-analysis at an office workstation, rather than the laboratory setting.

File Formats

Gamry data files acquired using Framework software have the extension *.DTA. DTA files are ASCII text, and therefore may be opened directly into various programs, such as Excel® or Origin®. When DTA files are opened in Echem Analyst, then saved, their extension becomes *.GData. Gdata files include information on curve-fits and graphing options, thus Gdata files are only viewable in Echem Analyst.

Do not delete your DTA files! They are the raw data and may need to be reloaded for certain analyses, such as area normalization.

To Open a Gamry Data File

There are several different methods to open data files in the Echem Analyst:

- 1. Launch the Echem Analyst icon on your desktop. Then use the *File\Open* function.
- 2. Use the link on your desktop to open the *My Gamry Data* folder. Double-click on the data file. You may have to instruct your computer to associate the *.DTA extension with the Echem Analyst program.




- 3. There are two quick ways to open a recent Gamry Data File.
 - a. A recently generated file can be opened using the hotlink in the *Analysis* menu in the Gamry Framework. (The last eight generated data files are listed there for quick access.) The Echem Analyst automatically launches and opens your selected data file.
 - b. A recently opened file in the Echem Analyst is shown at the bottom of the *File* menu. This is similar to how other Windows®-based programs display links to *Most Recently Used* documents.

By default, files acquired in the Framework are saved into the *My Gamry Data* folder. A shortcut for *My Gamry Data* installs on the Windows® desktop. You can change this default under *Tools\Options*, which opens the **Gamry Analysis Framework Options** window. Choose the *General* tab, and change the *Path* for each type of data file as desired.

Don't change the directory for *Analysis Script* Files. These are the VBA programs that do the actual analysis.

The data set appears in the main window. The menu items, tabs, and toolbar are adjusted for the particular type of data set you chose. In the example below, a Potentiostatic EIS data set is shown:

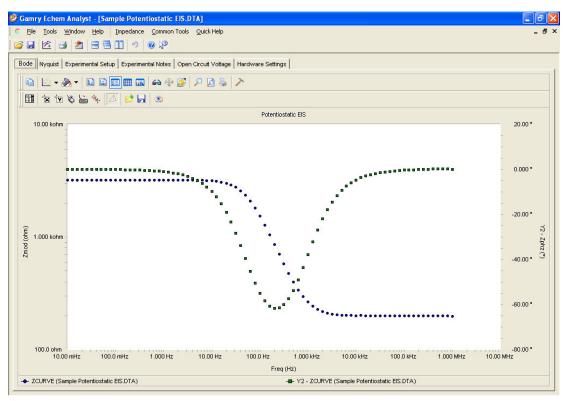

Note the tab-based display. The *Experimental Setup* tab displays all the information from the parameters used to run the experiment, such as Voltage, Time, etc. The *Experimental Notes* tab stores any notes written into the setup screen in Framework. The *Open Circuit Voltage* tab shows the voltage measured during the Initial Delay of the experiment. The *Hardware Settings* tab records information on the filters, ranges, gains. Additional information on date of last calibration, software version, etc. is also stored here.


Working with Plots in Echem Analyst

Introduction

Echem Analyst boasts a number of graphical tools to help you get the most information out of your data. Once you open a data set, these tools appear in the toolbars immediately above the plot:

In the data file, Framework writes a line that indicates the type of experiment used to generate that file. Echem Analyst displays both general and specific menus containing the analysis routines pertinent to your experiment.

Toolbars:

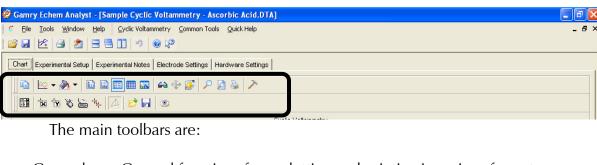

General functions for replotting and printing in various formats

Toolbar

Selection Tools to select and view data points

Toolbar

The following charts are references for buttons on the default toolbars. Descriptions of the most commonly used functions are highlighted in blue.

General Toolbar Functions

Button	Name	Action
	Copy to clipboard	Copy the selection to the Windows® clipboard. Can paste directly in Microsoft programs for reports or presentations.
<u>∞</u>	Gallery	Choose, via the dropdown menu, from scatter (no line), line, curve, and steps between data points
୬ ▼	Color	Choose the color of the selection from the dropdown menu. To change the color menu, use the <i>Palette</i> button on the <i>PaletteBar</i> .
Eil	Vertical Grid	Toggle between showing and hiding vertical grid lines on the plot
	Horizontal Grid	Toggle between showing and hiding horizontal grid lines on the plot
	Legend Bar	Toggle between showing and hiding a legend bar underneath the plot
	Data Viewer	Toggle between showing and hiding numerical data to the left of the plot
	Properties	Open the GamryChart Properties window, so that you can adjust effects, colors, markers, 3-D effects, lines, etc.
60	3D/2D	Toggle between two-dimensional and three-dimensional graphing
4	Rotate	Rotate the three-dimensional graph. Only active if the graph is 3D.
	Z-clustered	Offset two data sets so that they can be distinguished within one plot. Only operates in 3D mode.
₽	Zoom	Zoom in on a selected region. Also open a zoom slider at the bottom of the graph for continuous adjustment of zoom.
	Print preview	Open the Page setup window to adjust orientation of plot and printer margins
\$	Print	Print the plot
>	Tools	Open a dropdown menu, for choices of various toolbars and viewers to appear on the screen

Selection Toolbar Functions


Button	Name	Action
	Show curve selector	Open the Curve Selector area to the right of the plot, so that you can choose which data are used as the <i>x</i> -, <i>y</i> -, or <i>y</i> 2-coordinate, and which curve is the active trace.
 x	Select x region	Select a desired region of the plot across the x-axis. Commonly used to specify a region for <i>Quick-Integrate</i> .
-l y i	Select y region	Select a desired region of the plot across the y-axis Commonly used to specify a region for <i>Quick-Integrate</i> .
Ø	Select Portion of Curve using the Mouse	Left-click on the active trace using the mouse to select a section of the curve
[· ~ ·	Select Portion of Curve using the Keyboard	Open an area to the right of the plot, in which you can choose a segment of the trace numerically. See below for more details.
-k _{Sj-}	Draw Freehand Line	Draw a line on the plot
A	Mark Found Peaks	Place a tag on peaks that the software finds. A portion of the curve must be selected first.
 	Apply Template	Open the Apply User-Defined Chart Template window, and choose a previously created template to apply to the plot
	Save Template	Open the Save User-Defined Chart Template window, and save the template
•	Show Disabled Points	Show data points not being used in the plot

Changing the Axes on a Plot (the Curve Selector):

To choose a different variable plotted on an axis, use the *Curve Selector* button as follows:

(The example shown below is a Differential Pulse Voltammetry plot.)

1. With the plot open and displayed on the screen, click the Curve Selector

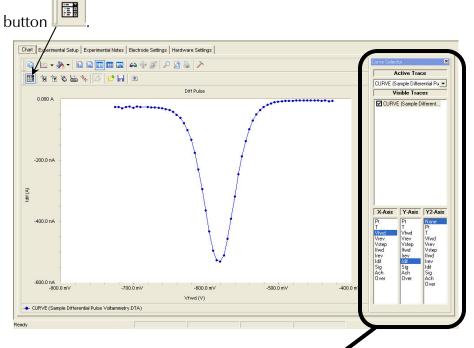

The Curve Selector area appears on the right side of the window.

- 2. Choose which trace is active by clicking on the drop-down menu in the *Active Trace* area.
 - The Active Trace is the data series on which the analysis will be performed. Use this, for example, if multiple files or cycles are displayed on the graph.
- 3. Choose which trace is visible on the plot by activating the checkbox next to the desired trace(s) in the *Visible Traces* area.
 - Visible Traces also contain any data fits that are performed.
- 4. Choose which variable is plotted on the *x*-axis by highlighting the variable in the *X*-Axis column.
- 5. Choose which variable is plotted on the *y*-axis by highlighting the variable in the *Y-Axis* column.
- 6. Choose which variable is plotted on the second *y*-axis by highlighting the variable in the *Y2-Axis* column.

If there is a data column graphed on the Y2-Axis, those data appear in a different color and a different scale.

Selecting Portions of a Curve for Analysis

For certain types of analysis, you must select a region of the curve, for example, within the *Peak Find* function in Cyclic Voltammetry or *Tafel Fit* function in Potentiodynamic. You can select regions by mouse or keyboard.

- 1. Left-click the mouse on the *Mouse* button in the *Selection toolbar*.
- 2. Use the left mouse-button to select each endpoint of the curve. Each endpoint is marked with a blue cross. The selected portion of the curve is shown as a thick blue line. (In the figure below, the color of the data has been changed to red for contrast to the selected region).




3. Another click on the *Mouse* button clears the selected region, and readies the graph for a different region to be selected.

Cutting and Pasting Images and Data

Many users want to present, publish, or otherwise share their data and charts from the Echem Analyst. To create a bitmap image of the graph,


As a Bitmap:

- 1. Choose the Copy to Clipboard button from the General Toolbar.
- 2. In the drop-down menu select As a Bitmap.

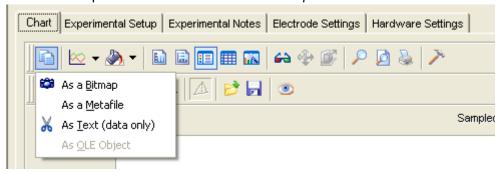

3. A bitmap image of the graph enters the clipboard. This bitmap may be pasted into a presentation program such as Word® or Powerpoint®.

This is a quick and easy way to import a picture of the graph for a presentation or report.



As Text:


Because Gamry Data Files are ASCII text, they can be opened easily in other graphing programs, such as Excel® or Origin®. Right-click on the DTA file and select *Open With...* and select for favored program. These programs, however, do not contain fitting routines specific to the analysis of electrochemical data. This *As Text* feature lets you fit the data in Echem Analyst and then copy and paste the data and fit into another graphing program.

This is a quick and easy way to import both the data and the fit into another graphing program.

If you are using the *As Text* feature, be sure to note the currently graphed parameters. The coordinates of this currently displayed graph are copied and can be pasted to graphing programs.

Plotting Conventions

By right-clicking the mouse on a non-zero value on an axis, you can choose to show that axis in logarithmic or linear scale, or to reverse the direction of the numbers.

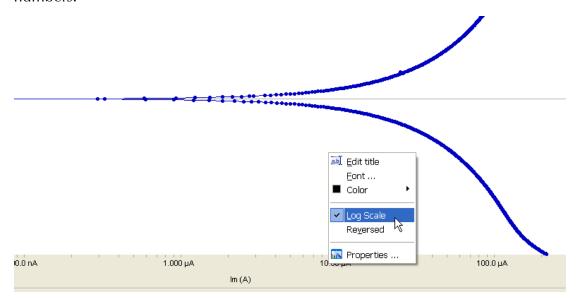


Alternatively, you can use the *Transform Axes* selection (if available) under the *Common Tools* menu.

Default plotting of graphs is auto-scale. Therefore, please note the y-axis's scale when a plot first appears. If bad data points obscure your data because of auto-scaling, you can choose to disable and hide those offending points.

To Get On-Line Help:

In the toolbar, choose Help.


 a. Click Gamry Help to obtain information about various commands and functions within Echem Analyst.

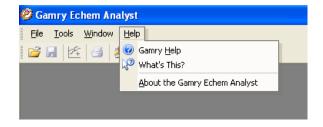

A separate Gamry Echem Analyst Help

window appears. You can find much information about the details of Echem Analyst here, such as plotting and analysis.

On-line help is a great resource for more involved questions. Help is divided up according to software package.

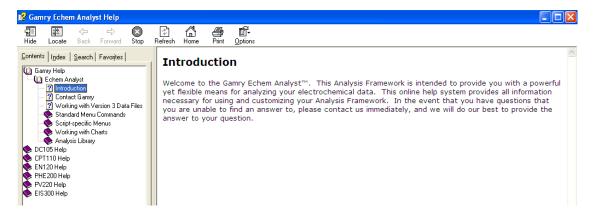


b. Click About the Gamry Echem Analyst to view the software version number.

Common Tools and Tabs

While each type of experimental data has its own method and parameters, there are certain commands that are common to many analyses. This section shows you these *Common Tools*.

Accessing Common Tools

- Open a dataset.
 In the toolbar, the function Common Tools appears.
- 2. Choose 🥝 Gamry Echem Analyst - [Sample Chronoamperometry.DTA] Common Common Tools Quick Help File Tools Window <u>H</u>elp Chronoamperometry Tools. Add I Constant 8 **8** M 1944 | 🗐 | 🏂 A drop-Linear Fit down Chart | Second Chart | Experimental Setup | Experimental Smooth Data На menu appears.
- Select the desired command.
 In this example, chronoamperometry's Common Tools includes three commands, Add I Constant, Linear Fit, and Smooth Data.




List of Common Tools

Command	Type of experiment	Result
Add E Constant	Cyclic Voltammetry, DC Voltammetry, Differential Pulse Voltammetry, Galvanic Corrosion, Normal Pulse Voltammetry, Pitting Scan, Polarization Resistance, Potentiodynamic Scan, Square-Wave Voltammetry	Adds a constant potential to all voltages in the plot. Used to easily convert between different Reference Electrode's scales.
Add I Constant	Chronoamperometry, Chronopotentiometry, Cyclic Voltammetry, Galvanic Corrosion, Pitting Scan, Polarization Resistance, Potentiodynamic Scan	Adds a constant value to all currents in the plot.
C from CPE, omega(max)	Potentiostatic EIS, AC Voltammetry, Mott-Schottky	Calculates capacitance from previously fit CPE values and data

		from the Nyquist plot.
C from CPE, R(parallel)	Potentiostatic EIS, AC Voltammetry, Mott-Schottky	Calculates capacitance from previously fit CPE and fit R data.
Linear Fit	Chronoamperometry, Potentiostatic EIS, AC Voltammetry, Chronocoulometry, Chronopotentiometry, Cyclic Voltammetry, DC Voltammetry, Differential Pulse Voltammetry, EMF Trend, Galvanic Corrosion, Mott-Schottky, Normal Pulse Voltammetry, Polarization Resistance, Potentiodynamic Scan, Square-Wave Voltammetry	When a region of the plot is selected, fits the data to y = mx + b.
Post-Run iR Correction	Cyclic Voltammetry, Polarization Resistance, Potentiodynamic Scan	Corrects a previously run scan for voltagedrop caused by <i>iR</i> .
Smooth Data	Chronoamperometry, Chronopotentiometry, Cyclic Voltammetry, DC Voltammetry, Differential Pulse Voltammetry, EMF Trend, Galvanic Corrosion, Normal Pulse Voltammetry, Pitting Scan, Polarization Resistance, Potentiodynamic Scan, Square- Wave Voltammetry	Smoothes the data. Useful for locating peaks in regions of high data-density.
Transform Axes	Galvanic Corrosion, Pitting Scan, Polarization Resistance, Potentiodynamic Scan	Changes x- and y-axes from linear to logarithmic, etc.

Experimental Setup

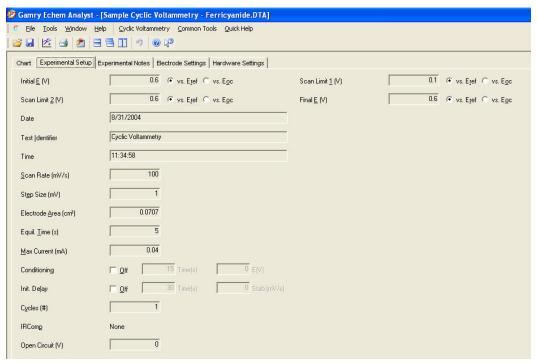

This particular *Experimental Setup* tab is from a Cyclic Voltammetry experiment. This example has many of the same parameters as other experiments. It shows:

Initial E, Scan Limit 1, Scan Limit 2, Final E vs. a reference electrode (E_{ref}) or the open circuit potential (E_{oc}) . Test Identifier Read from the Framework Setup. This field also becomes the default title of the plot. Time the experiment was started

Scan Rate How fast (in mV/s) the scan was taken

Step Size The interval between potentials

Electrode Area The size of the electrode

Equil. Time How much time was spent letting the electronics settle before

the scan was started

I/E Range Mode Automatically adjusted or fixed I/E (Current) Range mode.

Max Current The current value that sets the I/E Range in Fixed Mode and

determines the range in which to start in Auto Mode

Conditioning Whether off or on, for how long, and under what potential.

This Potential is vs. Reference.

Init. Delay Whether off or on. This is when the $E_{\rm oc}$ is measured. Cycles Number of how many voltammetry cycles were run

IR Compensation was used and the mode.

Open Circuit The value of the Open circuit voltage (Corrosion Potential). It is


the value of the last point in the Initial Delay.

Sampling Mode Data-acquisition mode (for Reference Family Potentiostats)

Experimental Notes

Click the Experimental Notes tab:

Any notes entered in the Framework are automatically displayed here. You may enter any additional comments about the experiment in the *Notes*... field.

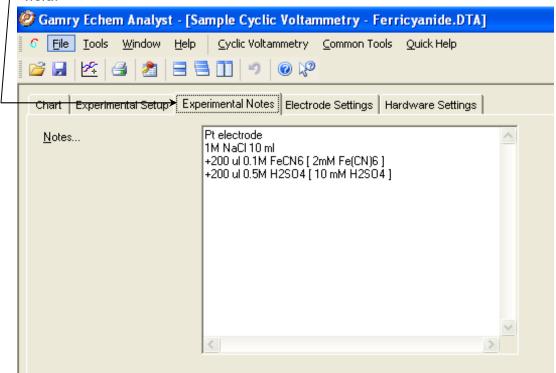

This is a version of a modern laboratory notebook. Enter as many details about your experiment as you can. Information here can help you avoid having long strings of descriptive file names.


Hardware Settings

This section documents the hardware settings that were used when the experiment was run, e.g., everything from the offsets, filters, and gains to the last time the potentiostat was calibrated.

This information is used primarily by Gamry Technical Support staff to help troubleshoot. Gamry determines defaults for these settings based on experience. Advanced users can adjust these settings manually before the experiment is run.

For DC Corrosion experiments, the *Hardware Settings* are set in the experiment code. For Physical Electrochemistry experiments, users have access to these features through the *Advanced Panel*, but Gamry recommends that only advanced users make changes to these settings. Consult *Help* or Gamry Technical Support for advice.

Click the Hardware Settings tab:-

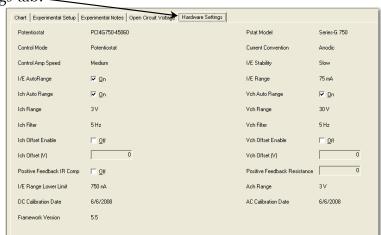

The hardware settings displayed here are:

Potentiostat Shows the potentiostat's label

Control Mode How the experiment was controlled
Control Amp Speed Shows the speed of the control amplifier

I/E AutoRangeShows if the I/E autorange function was enabledIch AutoRangeShows if the I_{ch} autorange function was enabledIch RangeShows the I_{ch} range (gain). 3 Volts = x1 Gain.

 $\begin{array}{lll} \hbox{Ich Filter} & \hbox{Shows the I_{ch} cut-off filter frequency} \\ \hbox{Ich Offset Enable} & \hbox{Shows if I_{ch} Offset was enabled} \\ \hbox{Ich Offset} & \hbox{Shows the I_{ch} offset voltage} \\ \end{array}$

Positive Feedback IR Shows if the IR positive feedback was enabled

Comp

I/E Range Lower Limit Shows the lowest available I/E Range available to use in this

experiment

Ach select Shows the input connector for A_{ch}

DC Calibration Date Shows the date of last DC calibration

Framework Version

Pstat Model Gives the model number of the potentiostat

Current Convention Shows which currents are positive I/E Stability Shows the I/E stability speed

I/E RangeShows the I/E (or current) range usedVch AutoRangeShows if V_{ch} autoranging is enabledVch RangeShows the maximum value for V_{ch} Vch FilterShows the V_{ch} cut-off filter frequencyVch Offset EnableShows if V_{ch} Offset was enabledVch OffsetShows the I_{ch} offset voltage

Positive Feedback Shows the positive feedback resistance applied to the system

Resistance

Ach Range Shows the voltage range of the auxiliary channel

Cable ID (for Reference Family Potentiostats only.) Gives the type of


cable connected to the system

AC Calibration Date Shows the date of last AC calibration

Instrument Version Shows the Firmware Version of a Reference Family Pstat

Detailed explanations of these parameters are beyond the scope of this guide.

Open Circuit Voltage (Corrosion Potential) Data

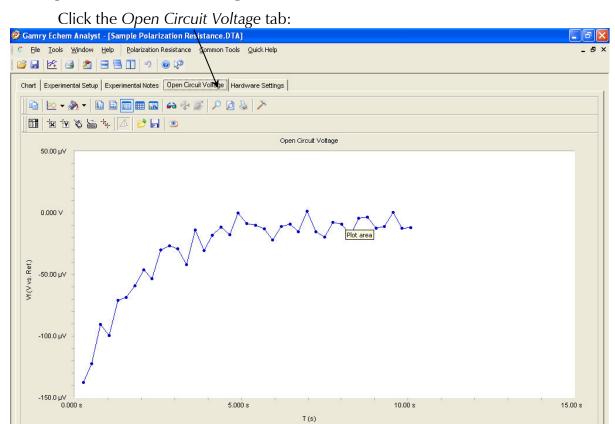


◆ OCVCURVE (Sample Polarization Resistance.DTA)

Because default plotting of graphs is auto-scale, please note the *y*-axis's scale when the *Open Circuit Voltage* first appears.

Analysis of Cyclic Voltammetry Data

This is a sample cyclic voltammetry file that installs in \My Gamry Data\ when Framework installs.

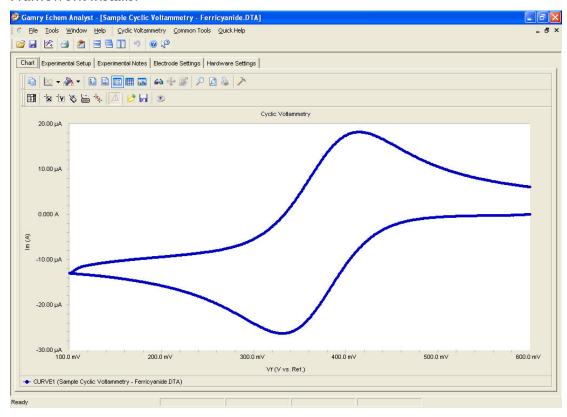


Cyclic Voltammetry Special Tools

This menu analyzes the cyclic voltammetry data.

1. In the main menu, choose Cyclic Voltammetry.

A drop-down menu appears.

2. Choose the desired tool:

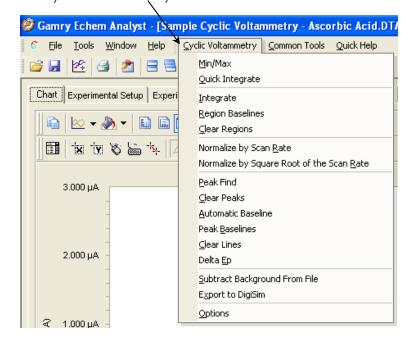

Tool	Function	Notes
Min/Max	Finds the minimum and maximum currents and voltages within the dataset. Results appear in a window below the plot.	
Quick Integrate	Integrates to find the total charge. Results appear in a window below the plot.	For multi-cycle CV experiments
Integrate	Integrates over a specified portion of the plot to find the total charge.	Portion of the curve must be selected
Region Baselines	Defines a line as the baseline for a specified region.	Region must be selected
Clear Regions	Clears all baselines from the dataset.	Region must be selected
Normalize by Scan Rate	Normalizes the dataset based on the scan rate.	
Normalize by Square Root of the Scan Rate	Normalizes the dataset based on the square-root of the scan rate.	
Peak Find	Finds peaks within a specified region of the dataset.	Portion of the curve must be selected
Clear Peaks	Clears all peaks found within the dataset.	Peaks must be identified
Automatic Baseline	Finds the baseline automatically.	Peaks must be identified
Peak Baselines	Defines a line as a baseline for a specified peak.	Peaks must be identified
Clear Lines	Clears all lines from the dataset.	Lines must be associated with graph
Delta Ep	Finds the potential difference between two peaks.	Peaks must be identified
Subtract Background from File	Subtracts a background amount from the dataset.	
Export to DigiSim	Exports the file to a DigiSim®-compatible format.	
Options	Changes units and grids for plotting the data.	

Integrating the Voltammogram

All integration methods integrate current versus time to get the total charge. There are two different ways to integrate under a curve with Echem Analyst.

Quick Integrate

Quick Integrate breaks the data into "curves". Each curve is integrated to a zero current. Quick Integrate integrates the entire area of each curve, unless an area is specified using the x-region icon.

Integrate

Integrate requires you first to select a portion of the curve. (See how to select a portion of the curve in the "Starting Echem Analyst" chapter.) After an integration is performed, you can change the baseline from the default 0 A to another line, either a line that you draw, or an *Automatic Baseline*.


1. Open the data file.

2. Select the *Draw a Freehand Line* button: —

 Left-click and hold on the graph to place an anchor point.
 Holding down the mouse button, extend the line with the mouse.
 Move or extend the line as you wish.

Directions to accept the line are printed at the bottom of the window.

- Right-click the mouse on the line and either Accept or Delete.
 After you accept the line, it turns from dashed to solid.
- Select the portion of the curve to integrate.
 This function is described in detail earlier.

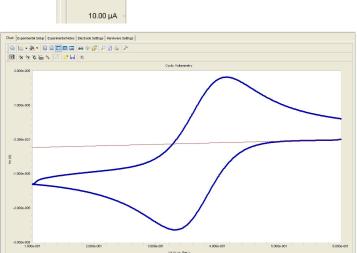

🦻 Gamry Echem Analyst - [Sample Cyclic Voltamme

TX TY TY SEE

20.00 μΑ

File Tools Window Help Cyclic Voltammetry Common Tools Qu

Chart Experimental Setup | Experimental Notes | Electrode Settings | Hardware Settings |


Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Limit | Lim

Draw Freehand Line

6. Select Integrate from the Cyclic Voltammetry menu.

> This integrates the section between the curve and the zero amp line.

7. To change the baseline to the desired userdrawn line, select Region Baselines from the Cyclic Voltammetry menu.

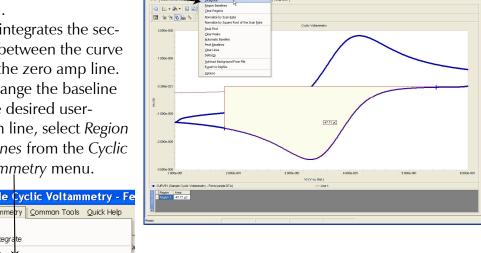


Region Baseline Settings

-28.41 uC

None


Select Regions and Baselines Region

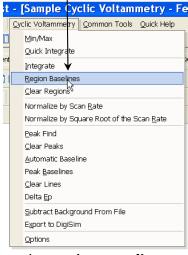

The **Region Baseline Settings** window appears.

8. Select the Region Baseline from the available lines. You may draw multiple lines from which to choose.

> Note that the integrated region moves from the default 0 Amps baseline to the userdrawn line.

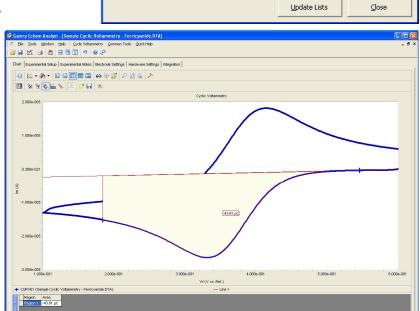


Modeling Polarization Resistance Data

Polarization Resistance Special Tools

This menu analyzes the polarization resistance data.

1. In the main menu, choose Polarization Resistance.

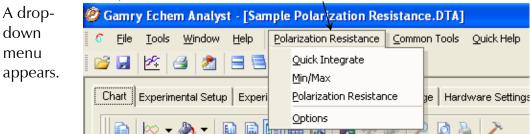


2. Choose the desired tool:

Tool	function
Quick Integrate	Integrates to find the total charge. Results appear in a window below the plot.
Min/Max	Finds the minimum and maximum currents and voltages within the dataset. Results appear in a window below the plot.
Polarization Resistance	Within a selected portion of the curve, finds the polarization resistance.
Options	Changes units and grids for plotting the data.

Finding the Polarization Resistance

Method 1: Manual Eentry of the Tafel Constants


- 1. Select the desired portion of the curve. (See section....)
- 2. In the main menu, choose *Polarization Resistance*.

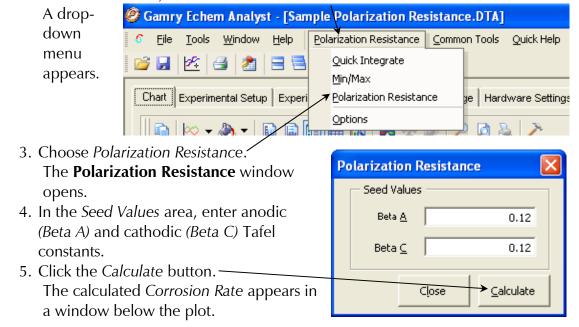

Method 2: Automatic Selection of Voltage Region

Gamry offers another way to select automatically the voltage region over which this analysis is done.


1. In the Polarization Resistance menu, choose Options.

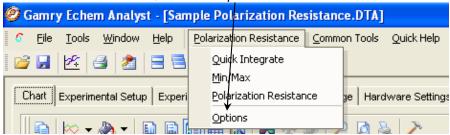

The **Polarization Resistance Options** window opens.

2. Select this *Automatic* radio button, specify the region around Ecorr to use, and *Save as Defaults*. You are prompted directly for Tafel constants when a polarization resistance file is opened.

This is how Gamry's RpEc Trend experiments calculate corrosion rate.

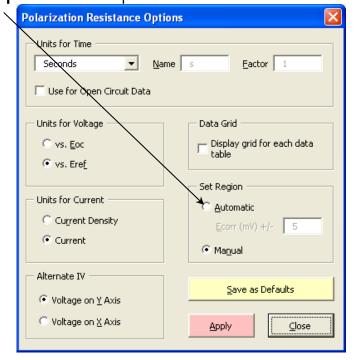


Modeling Potentiodynamic (Tafel) Data

A Tafel experiment is also a very popular electrochemical corrosion technique. The following analysis is performed on the sample Potentiodynamic data file.

Tafel Fit

- 1. Select the region over which to perform the Tafel fit.


 This region must encompass the Ecorr (Open Circuit Potential).
- 2. Select Tafel Fit from the Potentiodyanmic menu:

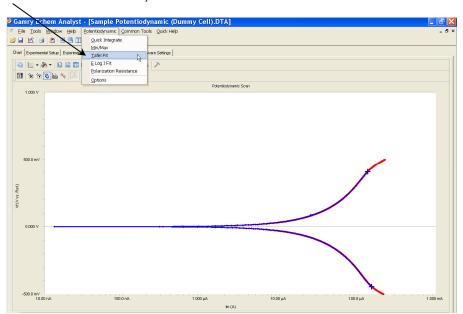

3. A **Tafel Fit** window appears where you may input seed values optionally for the fit. The better the information we provide the fitting routine, the more likely it will be able to generate an acceptable fit.


If you have reasonable starting parameters for the fit, input them in the Seed Values area, and check the Use Seed Values checkbox. If you do not have any confidence at all in your range of parameters, do not check the Use Seed Values checkbox.

We recommend using the seed values supplied by the Echem Analyst.

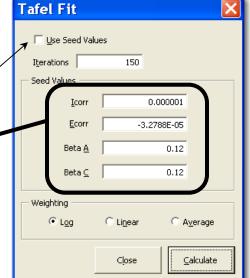

- 4. Click the Calculate button.
 - When the *Calculate* button is pressed, the changes can be subtle. The following events occur:
 - The parameters in the **Tafel Fit** window become the fit parameters.

- A fit line is displayed on the graph.
- A new *Tafel* tab is created (to the right of the *Hardware Settings* tab) that holds the information about the fit.

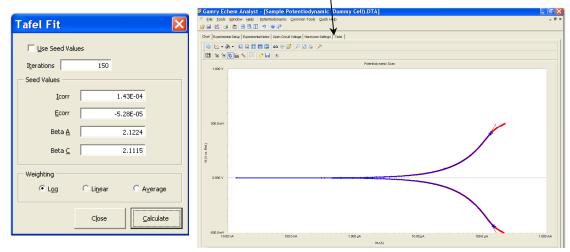

E Log I Fit


The *E Log I* fit is a useful fit if you want to fit the data one branch (anodic or cathodic) at a time. This can be important if one branch doesn't show linear behavior, but the other does.

The fit is called *E Log I* because of the semi-logarithmic nature of a Tafel plot. The x-axis is the logarithm of current, while the y-axis is potential on a linear scale.

Method


1. Select a portion of the curve.

Here you need only the linear section of one of the branches. This selection does not include Ecorr (Eoc (open circuit potential)).



3. Click the *Calculate* button. A single branch of the Tafel data is fit. The fit is shown on the graph, and the results of the fit are contained in a new *E Log I* tab.

You can run a Polarization Resistance fit on this Potentiodynamic data, if the axes of current are changed to the linear scale. Generally

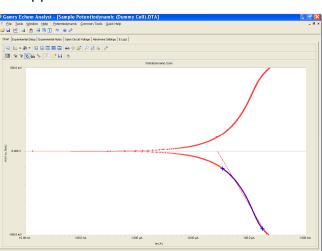

E Log | Fit

Close

Ecorr |

-9.28802E-06 Volts

Calculate


we suggest running a separate experiment on a new sample of the same material because of the more-polarizing, more-destructive nature of the Potentiodynamic experiment.

Modeling EIS Data

The data-analysis features shown here are common to many of the AC-based techniques. By far the most popular type of AC experiment is Potentiostatic EIS.

Bode and Nyquist Plot View

Click the *Bode* tab or the *Nyquist* tab of the plot you prefer to work with. All fits are displayed on both the Bode and Nyquist plots. Because they are different representations of the same data, the fit results are identical.

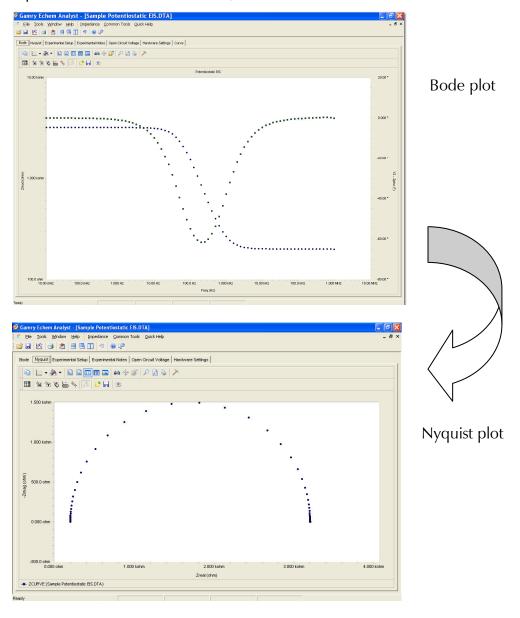


EIS Special Tools

EIS data-analysis uses an equivalent-circuit approach. This menu creates and runs fits for EIS data. Commands in this menu allow you to build an equivalent-circuit model in the *Model Editor*, then fit that model to your data. This menu also lets you run advanced procedures, such as *Subtract Impedance*, and run Kramers-Kronig transforms.

1. In the main menu, choose *Impedance*. A drop-down menu appears.

2. To create or edit an equivalent circuit, choose Model Editor.
The Impedance Model

Editor

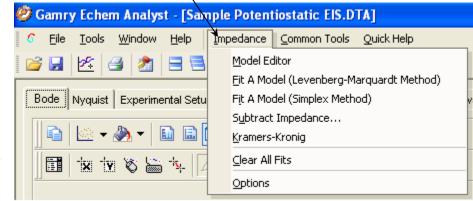

window appears. See the next page for how to use it.

3. To fit the data using the Levenberg-Marquardt method, choose *Fit A Model* (Levenberg-Marquardt Method).

The **Select Model File** window opens.

Choose the appropriate model file, and click the OK button.

4. To fit the data using the Simplex method, choose Fit A Model (Simplex Method).

Simplex method weighs the user's seed values less. We recommend using the Simplex method.

5. To subtract an impedance from the data, choose Subtract Impedance....

The **Impedance Subtraction** window appears.

Choose:

Element Choose a circuit element from the drop-down menu.

Model Browse for a previously defined model.

Spectrum Browse for a data-set.

Click the Close button.

6. To use the Kramers-Kronig method,

Choose Kramers-Kronig.

Kramers-Kronig is a model-independent transform that checks the EIS data for consistency.

The **Kramers-Kronig** window appears.

7. To clear all fits from the plot,

Choose Clear All Fits.

8. To change time or impedance units,


Choose Options.


This option let you normalize the data and fits to the normalized area.

The Model Editor

The Impedance Model Editor allows you to create an equivalent circuit, via a

drag-and-drop method.

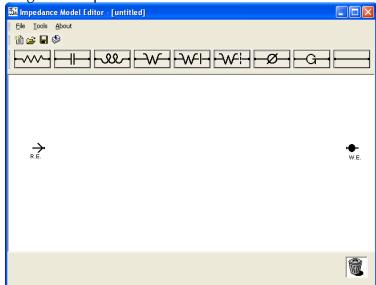

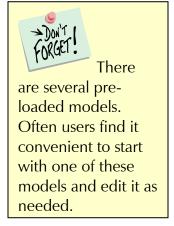

Circuit Elements

Symbol	Element	Comments
	Resistor	Abbreviated as R. $Z = R$
$-\parallel$	Capacitor	Abbreviated as C. $Z = -i/\omega C$
-ll-	Inductor	Abbreviated as L. $Z = iL\omega$
$-\infty$	Constant	Models an inhomogeneous property of the system, or a
~	Phase	property with a distribution of values. Often abbreviated as
	Element	CPE.
•	Wire	Connects one element to the next.
$-$ C \rightarrow	Gerischer	Models a reaction in the surrounding solution that happened
_	element	already; also used for modeling a porous electrode. Often abbreviated as G.
\rightarrow \wedge \leftarrow	Infinite	Models a linear diffusion to an infinite planar electrode.
VV	Warburg	Often abbreviated as W.
->^E -	Bounded	Models diffusion within a thin layer of electrolyte, such as
VVI	Warburg	electrolyte trapped between a flat electrode and a glass microscope slide. Often abbreviated as T.
$-\lambda \lambda \mathcal{L}$	Porous	Models diffusion through a thin layer of electrolyte, such as
V V I	Bounded	electrolyte trapped between an electrode and a permeable
	Warburg	membrane covering it. Often abbreviated as O.

Building an Equivalent Circuit

1. Adding an element

a. Click on an element symbol.

The element appears in the central window.

b. Place the mouse cursor over the element. Left-click and drag to move the element to its desired position.

2. Connecting elements

- a. Click on the Wire symbol
- b. Left-click one end of the wire and drag the end to the element.

The element's border turns green when the wire's end reaches the element.

3. Deleting an element

a. Right-click on the element.

The Delete command Pelete appears.

b. Left-click on the Delete command.

The element vanishes.

Here is an example of a simple equivalent circuit (a Randles model) constructed

in the **Impedance**

Model Editor:

4. Relabeling and fixing parameters for an element

This lets you rename the element, and specify a Lower and Upper Limit for its value. Renaming the element helps you distinguish between elements of the same type during fitting. Giving the


program limits on the parameters may help the mathematical algorithm. For example, we know values are generally positive, so a Lower Limit = 0 is reasonable to set.


a. Left-click on the name of the element (here, R4).


The **Parameter** window appears.

- b. Enter a new Parameter Name.
- c. Enter an *Initial Value*, i.e., the first trial value for fitting.
- d. In the Lower Limit Test and Upper Limit Test fields, enter lower and upper limits, and check the Enable checkbox, as desired.
- e. Click the OK button.

The **Parameter** window closes, and the element is set to these parameters.

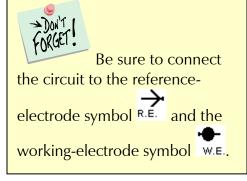

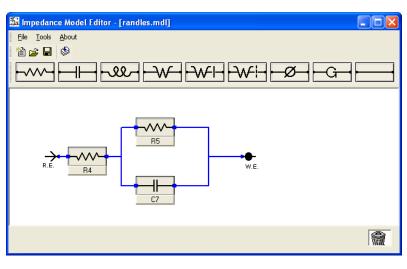

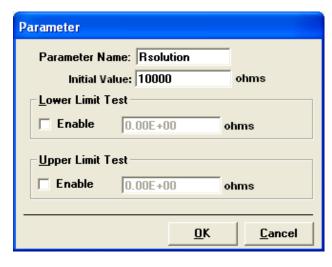

Compiling the Equivalent Circuit

When the equivalent circuit is complete, the circuit can be compiled before use to check for connectivity of the wires. Compiling is only used to check connections

In the toolbar, choose Tools.
 A drop-down menu appears.
 Impedance Model Edit
 Compile Tools About

 Choose Compile or click the Test Compile button in the toolbar.
 The software compiles the equivalent circuit.
 If there is a problem, such as a missing connection, an error message appears,

3. Click the OK button to continue.

and a red box outlines the problem

4. Inspect the schematic and make necessary corrections.


If the equivalent circuit compiles properly, the **Model Editor** window appears:



5. Click the *OK* button to continue.

element:

6. You may save the equivalent circuit with a *.mdl extension by clicking *File* in the toolbar, and choosing *Save* or *Save As*.

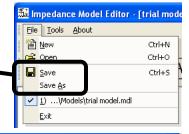


The File Save As window appears.

The default folder for saving model equivalent circuits is the *Models* folder.

 Name and save the file here, or choose a different folder. The model shown above was saved as trial model.mdl.

The **File Save As** window closes.

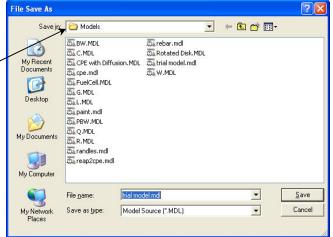

Fitting the Data to the Equivalent-Circuit Model

 With the data open and plotted, click Impedance, and choose Fit A Model (Simplex — Method).

The **Select Model File** window appears.

2. Choose the desired model.

The default folder for models is the *Models* folder. This *Models* folder is in the

File Tools Window Help

📂 🔙 🖄 🎒 🛢 🗏

Bode Nyquist Experimental Setu

1 × × × × × ×

Gamry Echem Analyst - [Sample Potentiostatic EIS.DTA]

Impedance Common Tools Quick Help

Fit A Model (Simplex Method)

Subtract Impedance...


Kramers-Kronig Clear All Fits

Options

Fit A Model (Levenberg-Marquardt Method)

Model Editor

C:\Documents and Settings\All Users\Application Data\Gamry Instruments\Echem Analyst\Models by default. As our example, we choose the model trial model.mdl created previously.

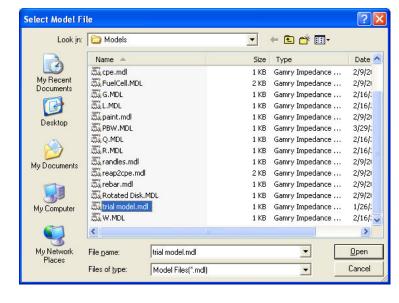


3. Click the *Open* button.

The **Select Model File** window closes, and the **Impedance Fit by the Simplex Method** window appears.

4. Set parameters.

Choose the maximum number of *Iterations* to loop before stopping the fit. Enter estimates for all the circuit elements in the *Model Parameters* area. Fix particular elements by enabling their *Lock* checkboxes.


In our example, we try 100 Ω for Ru, 2500 Ω for Rp, and 100 nF for Cf and leave all of them free (unlocked).

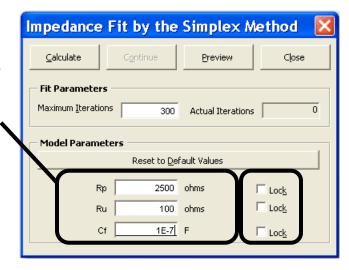


5. Click the *Calculate* button to start the fit.

The software attempts to fit the model to the data. When finished, the fitted parameters appear next to each circuit element.


Our model results give $Rp = 3 k\Omega$ Rsolution = 199.7 Ω Cf = 980 nF

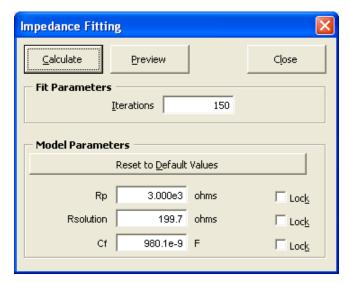

Like other Echem Analyst fits, the fit also appears superimposed upon the data and a new tab is created that contains those results.

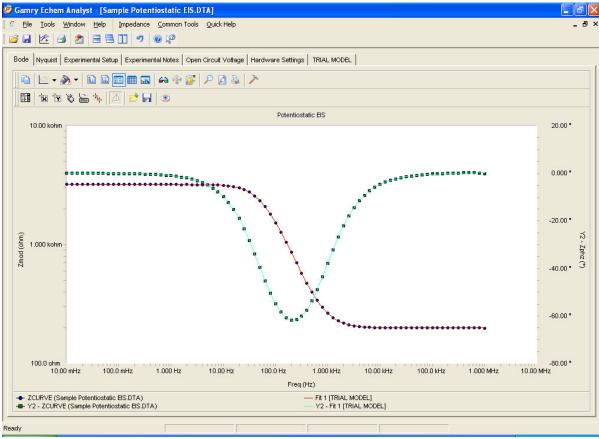

If you try another fit using the same model, this fit will be overwritten. If you fit to another model, the fit results of both models will be displayed.

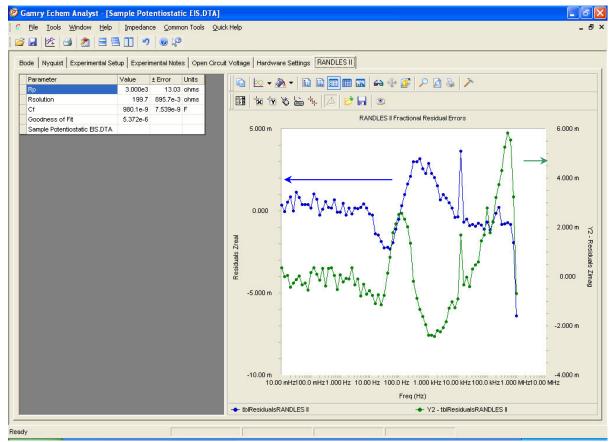

This new tab shows the residual errors and goodness of fit, along with the various plotting tools. Residuals are a point-by-point *Goodness of Fit*, which quantifies how closely the data match the fit. A smaller number indicates a better fit.

The blue data (*Zreal*) correspond to the *y1*-axis (on the left); the green data (*Zimag*) correspond to the *y2*-axis (on the right).

Headings in Data-File Columns

DC Data Files

Abbreviation MeaningPt Point number

T Time

Vm, Vf Measured voltage Im Measured current

Vu Uncompensated voltage

Sig Signal from the signal generator

Ach Auxiliary channel

IE Range I/E (Current Measurement) range on which measurement was

nade

Over Any overloads. Numeric record of different overload types

0 No overloads

EIS Data Files

AbbreviationMeaningFreqFrequency

Zreal, Zimag, Zmod, Zphz Calculated values of impedance

Idc, Vdc DC component of current and voltage,

Yreal, Yimag Admittance (calculated from Z)

Current Conventions According to Framework™ and Echem Analyst

The current convention in the Framework for all experimental packages is that an anodic/oxidation current is positive.

To change the current convention (whether anodic/oxidation currents or cathodic/reduction currents are positive), in the menu <code>Tools\Options\Units</code> tab, specify the current you want represented as positive. The current convention can be changed by editing the experimental script (contact Gamry or your Gamry representative if you need to do this). Regardless of the current convention used in the Framework, it can be changed in the Echem Analyst to the one you desire by the user (see below for exceptions).




The current convention affects all experiments run under the PHE200 Physical Electrochemistry and PV220 Pulse Voltammetry heading. No other data files are affected.

To change the current convention in the Echem Analyst, in the menu *Tools/Options/Units* tab specify the current you want represented as positive.


To change the current convention in other experimental packages (DC105, EIS300 etc) please contact Gamry or your Gamry representative.

To Edit Visual Basic Scripts:

1. In the toolbar, choose *Tools*. A dropdown menu appears.

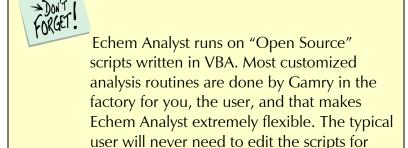


electrochemical analysis.

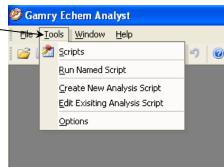


Simulating an EIS Curve

It is often useful to simulate the response of an equivalent circuit.


- 1. Launch the Echem Analyst.
- 2. Select *Tools/Run Named Script/*select *EIS Model Simulation Script*. Gscript. This opens a blank chart.

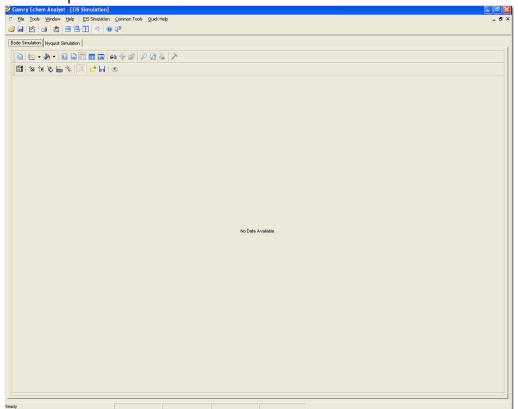


3. Select *EIS Simulation/Simulate* (use the *Model Editor* to build or edit the model). The **EIS Model Simulation** window appears.

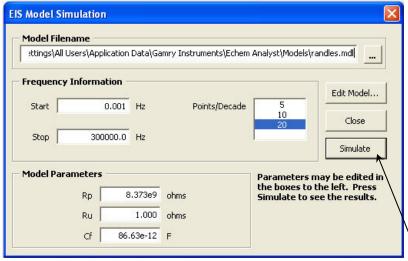

- 4. Select the saved model, and input parameters for the experiment (frequencies and data-point density) and values of all circuit elements.
- 5. Click the *Simulate* button. The simulation appears under new tabs.

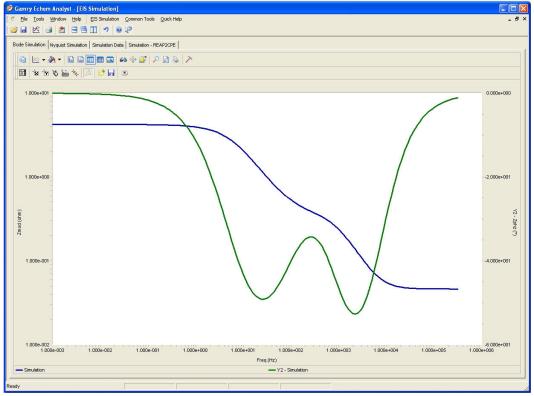

This is a simulated Bode plot.

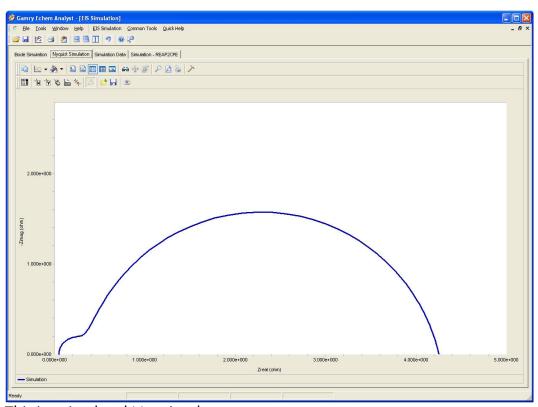

This is a simulated Nyquist plot.

1	ln	Ы	Δ	v
		(1	Н	х

		Corrosion Rate	24
*		Current Convention	18
		Current conventions	37
*.DTA	3	Curve Selector	8
*.GData	3	Curve Selector area	7, 8
*.mdl	32	Curve Selector button	8
· mar	32	Curve Selector button	8
		Cutting and pasting	10
3		Cycles	15
20/20		Cyclic Voltammetry	20, 23
3D/2D	6	Cyclic voltammetry	20, 23
Α		D	
AC Calibration Date	18	Data Viewer	6
Accept	22	DC Calibration Date	18
Ach	36	Delete	22, 31
	18	Delta Ep	21
Ach Range Ach select	17	DigiSim [®]	21
		Draw a Freehand Line button	22
Active Trace area	8	Draw Freehand Line	7
Add E Constant	13	Diaw Freeliand Line	/
Add I Constant	13		
Analysis menu	3	E	
Apply Template	7		
Apply User-Defined Chart T		E Log I Fit window	27
As a Bitmap	10	E Log I tab	27
As Text	10	Ecorr	27
ASCII	3, 10	EIS Model Simulation window	/ 38
Automatic Baseline	21, 22	Electrode Area	15
Automatic radio button	25	element	31
		Element	29
В		Enable checkbox	31
D		Equil. Time	15
Beta A	24	equivalent circuit	29, 30, 31, 32, 38
Beta C	24	Excel [®]	3, 10
bitmap image	10	Experimental Notes tab	4, 16
Bode tab	28	Experimental Setup tab	4, 15
Bounded Warburg	30	Export to DigiSim	21
Ü			
C		F	
C		F	
C from CPE, omega(max)	13	File	32
C from CPE, omega(max)	13 14		32 32
		File	
C from CPE, omega(max) C from CPE, R(parallel)	14 18	File File Save As window	32
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button	14 18 24, 26, 27, 33	File File Save As window Final E	32 15 18
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor	14 18 24, 26, 27, 33 30	File File Save As window Final E Firmware Version	32 15 18
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM	14 18 24, 26, 27, 33 30 3	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua	32 15 18 ardt Method) 29
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes	14 18 24, 26, 27, 33 30 3 8	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method)	32 15 18 ardt Method) 29 29, 33
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits	14 18 24, 26, 27, 33 30 3 8 29	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework	32 15 18 18 19 29 29, 33 20 18
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines	14 18 24, 26, 27, 33 30 3 8 29 21	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™	32 15 18 18 29 29, 33 20 18 2, 37
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Peaks	14 18 24, 26, 27, 33 30 3 8 29 21 21	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework	32 15 18 18 19 29 29, 33 20 18
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Regions	14 18 24, 26, 27, 33 30 3 8 29 21 21 21	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework Freq	32 15 18 18 29 29, 33 20 18 2, 37
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Regions Color	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™	32 15 18 18 29 29, 33 20 18 2, 37
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™ Freq	32 15 18 29 29, 33 20 18 2, 37 36
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™ Freq G Gallery	32 15 18 18 29 29, 33 20 18 2, 37 36
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Compile	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™ Freq Gallery Gamry Analysis Framework C	32 15 18 18 29 29, 33 20 18 2, 37 36 Options window 4
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Compile Conditioning	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™ Freq Gallery Gamry Analysis Framework C Gamry Echem Analyst Help w	32 15 18 18 29 29, 33 20 18 2, 37 36 Options window 4 vindow 11
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Commile Conditioning Constant Phase Element	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32 15	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Version Framework™ Freq G Gallery Gamry Analysis Framework C Gamry Echem Analyst Help w	32 15 18 18 29 29, 33 20 18 2, 37 36 Options window 4 vindow 11 11
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Common Tools menu Compile Conditioning Constant Phase Element Control Amp Speed	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32 15 30 17	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework™ Framework™ Freq G Gallery Gamry Analysis Framework C Gamry Echem Analyst Help w Gamry Help GamryChart Properties windo	32 15 18 29 29, 33 20 18 2, 37 36 Options window 4 vindow 11 11 0w 6
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Common Tools Conditioning Constant Phase Element Control Amp Speed Control Mode	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32 15 30 17	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Framework™ Freq Gallery Gamry Analysis Framework Gamry Help GamryChart Properties windo	32 15 18 29 29, 33 20 18 2, 37 36 Options window 4 7indow 11 11 11 11 11 11
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Common Tools Conditioning Constant Phase Element Control Amp Speed Control Mode Copy to clipboard	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32 15 30 17 17	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Framework™ Freq Gallery Gamry Analysis Framework C Gamry Echem Analyst Help w Gamry Help GamryChart Properties windo General tab General Toolbar	32 15 18 18 29 29, 33 20 18 2, 37 36 Options window 4 7indow 11 11 11 11 11 11 11 11 11 11 11
C from CPE, omega(max) C from CPE, R(parallel) Cable ID Calculate button Capacitor CD-ROM Changing the axes Clear All Fits Clear Lines Clear Peaks Clear Regions Color Common Tools Common Tools Common Tools Conditioning Constant Phase Element Control Amp Speed Control Mode	14 18 24, 26, 27, 33 30 3 8 29 21 21 21 6 11, 13 11 32 15 30 17	File File Save As window Final E Firmware Version Fit A Model (Levenberg-Marqua Fit A Model (Simplex Method) Framework Framework Framework™ Freq Gallery Gamry Analysis Framework Gamry Help GamryChart Properties windo	32 15 18 29 29, 33 20 18 2, 37 36 Options window vindow 11 11 0w 6

Hardware Settings tab	32 33	Model Editor window Model Parameters area	35	Goodness of Fit
Hardware Settings tab	32, 33			ш
Indicate	, c	Mouse button		11
help	3, 4	My Gamry Data folder	4, 17, 27	Hardware Settings tab
Horizontal Grid Comparison of the Scan Rate Normalize by Scan Rate Normalize by Square Root of the Scan Rate Nores field Nyquist tab			11	•
Normalize by Scan Rate Normalize by Square Root of the Scan Rate Normalize Normalize by Square Root of the Scan Rate Normalize Normalize by Square Root of the Scan Rate Normalize by Sq		N	11	Help
Normalize by Square Root of the Scan Rate Notes field Notes field Nyquist tab Open (Incurion open (Incurion open (Incurion) Popen (Incurion) Popen (Incurion) Palet button Not table (Incurion) Palet button New (Incurion) Palet button New (Incurion) Palet button New (In		17	6	Horizontal Grid
VE AutoRange	21	,		
VE AutoRange				I
	16			-
	28	Nyquist tab		
		Ο		
Ich AutoRange Ich Filter Ich Filter Ich Offset Ich Filter Ich Offset Ich Open function Ich Open function Ich Open function Ich Open Ich Ich Ich Open Ich Ich Ich Open Ich Ich Ich Ich Open Ich				
Ich Filler 17 Open button Open Circuit ChC Offset C	29, 31, 32			
Ich Offset Ich Offset Ich Offset Enable Ich Offset Ich Offse	3	•		
Act Content	33			
Ich Range 17	15			
Idea Se la Range	4, 19			
IE Range 36	3		1/	•
Im 36 Impedance Impedance 29	10 4, 21, 24, 25, 29	•	20	
Impedance Fit by the Simplex Method window 33 Impedance Model Editor 29, 30, 31 Impedance Model Editor 29, 30, 31 Impedance Model Editor window 29 Impedance Subtraction window 29 Impedance Subtraction window 29 Inductor 30 Palettee button Infinite Warburg 30 Palette Bar Inductor 30 Parameter Name Inductor 31 Parameter Window Inductor 31 Pack Find function Integrate 31, 22, 23 Inductor 31 Pack Find function Integrate 31, 22, 23 Integrating the voltammogram 32 Polarization Resistance 33 Polarization Resistance Window Porous Bounded Warburg Positive Feedback IR Comp Positive Feedback IR Comp Positive Feedback Resistance Post-Run IR Correction Potentiodyanmic Potentiodyanmic Potentiodyanmic Potentiodyanmic Potentiodyanmic Potentiodyanmic Potentiodyanmic Potentiodyanmic Print Prin	4, 21, 24, 23, 29 3, 10		30	
Impedance Fit by the Simplex Method window 33 Impedance Model Editor 29, 30, 31 Impedance Model Editor window 29 Impedance Subtraction window 29 Impedance Subtraction window 29 Inductor 30 Palette button Infinite Warburg 30 Palette Bar Infinite Warburg 15 Parameter Name Infinite Delay 15 Parameter Name Initial Delay 4, 15 Parameter window Initial Delay 17 Path Initial E 15 Parameter window Instrument Version 18 Peak Find Integrate 21, 22, 23 Integrating the voltammogram 22 Polarization Resistance 13, 14, 15 Polarization Resistance 13, 14, 16 Positive Feedback IR Comp Positive Feedback IR Comp Positive Feedback Resistance Post-Run iR Correction Print Print Preview Properties Kramers-Kronig method 29 Potentiodyanmic Ferature Post-Run iR Correction Print Print Preview Properties Legend Bar 6 Pstat Model Pt 36 Unice Fit 13, 14 Lock checkbox 33 Lower Limit Test 31 Quick Integrate Quick-Integrate Quick-Integrate Amac Pake Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model	3, 10	_	20	
Impedance Model Editor Impedance Model Editor window Impedance Subtraction window Impedance Subtraction window Infinite Warburg Initi. Delay Initi. Delay Initi. Delay Initial Delay Initial Delay Initial E Initial Value Instrument Version Integrate Integrating the voltammogram IR Comp Ik IR Comp IK K Kramers-Kronig method Kramers-Kronig window L Legend Bar Levenberg-Marquardt method Linear fit L Mark Found Peaks Mark Found Peaks Mark Found Peaks Min/Max Mark Found Peaks Min/Max Mark Found Peaks Min/Max Mark Found Peaks Min/Max Page setup window Palette Button Palett	50	Over		•
Impedance Model Editor window		n		
Impedance Subtraction window Inductor 30 Palette button Infinite Warburg 30 Palette button Infinite Warburg 30 Palette Bar Infinite Warburg 15 Parameter Name Initial Delay 15 Parameter window Initial E 15 Path Initial E 15 Path Initial Value 31 Peak Baselines Installation 3 Peak Find Instrument Version 18 Peak Find Integrate 21, 22, 23 plots Integrating the voltammogram 22 Polarization Resistance 13, 14, IR Comp 15 Polarization Resistance window Positive Feedback IR Comp Positive Feedback IR Comp Positive Feedback Resistance Post-Run iR Correction Post-Run iR Correction Print		Р		
Indiuctor Infinite Warburg Init. Delay Init. Delay Init. Delay Initial Delay Initial Delay Initial Delay Initial E Initial Value Initial I E Initial Value Initial I E Initial Value Installation Instrument Version Instrument Version Integrate Integrating the voltammogram IR Comp	6	Page setup window		
Infinite Warburg Init. Delay Init. Delay Init. Delay Initial Delay Initial Delay Initial Delay Initial E Initial Value Installation Instrument Version Integrate Integrate IR Comp IS IR Co	6			•
Initial Delay	6		30	
Initial Delay Initial Delay Initial E Initial Value Initial Value Installation Instrument Version Integrate Integrating the voltammogram IR Comp Itegrating the voltammogram IR Comp Itegrations IR Polarization Resistance ITEGRAPH Positive Feedback IR Comp Positive Feedback Resistance Post-Run iR Correction IR Comp ID Potentiodyanmic ID Potentiodyanmic ID Print I	31		15	_
Initial E	31		4, 15	
Installation 3 Peak Find Instrument Version 18 Peak Find Integrate 21, 22, 23 plots Integrate 21, 22, 23 plots Integrating the voltammogram 22 Polarization Resistance 13, 14, IR Comp 15 Polarization Resistance window Iterations 33 Porous Bounded Warburg Positive Feedback IR Comp Positive Feedback Resistance Post-Run iR Correction Post-Run iR Correction Potentiodyanmic Framers-Kronig transforms 29 Potentiostat Kramers-Kronig window 29 Powerpoint® Print	4			
Instrument Version Integrate Integrate Integrate Integrating the voltammogram Integrate Integrat	21	Peak Baselines	31	Initial Value
Integrate 21, 22, 23 plots Integrating the voltammogram 22 Polarization Resistance 13, 14, IR Comp 15 Polarization Resistance window Iterations 33 Porous Bounded Warburg Positive Feedback IR Comp Positive Feedback Resistance Post-Run iR Correction Potentiodyanmic Potentiodyanmic Potentiodyanmic Print Pr	21	Peak Find	3	Installation
Integrating the voltammogram IR Comp IR Comp Iterations IR Correction IR Correcti	g	Peak Find function	18	Instrument Version
IR Comp Iterations Ite	5	plots	21, 22, 23	Integrate
Atterations Reference of the process of the proces	3, 14, 24, 25, 27	Polarization Resistance		Integrating the voltammogram
R R R R R R R R R R R R R R R R R R R	24	Polarization Resistance window		IR Comp
K Kramers-Kronig method Kramers-Kronig transforms Kramers-Kronig transforms Kramers-Kronig window L L Legend Bar Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max Positive Feedback Resistance Post-Run iR Correction Postentiodyanmic Potentiostat Powerlies Powerpoint® Print Print preview Properties Print preview Properties Print preview Properties Power Jone Peaks Print Print preview Properties Power Jone Peaks Postat Model Pt 36 Q Q Q A A A A A A A A A A A A A A A A	30		33	Iterations
Post-Run iR Correction Kramers-Kronig method Kramers-Kronig transforms 29 Potentiodyanmic Kramers-Kronig window 29 Powerpoint® Print Print Print preview Properties Legend Bar Levenberg-Marquardt method 29 Pt 36 Linear Fit 13, 14 Lock checkbox 33 Lower Limit Test Mark Found Peaks Max Current Min/Max Post-Run iR Correction Potentiodyanmic Potenti	17			
Rramers-Kronig method Kramers-Kronig transforms Kramers-Kronig transforms Kramers-Kronig window Potentiodyanmic Potentiodyan	18			K
Kramers-Kronig transforms Kramers-Kronig window Print Print Print preview Properties Legend Bar Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max Powerpoint® Print Print Print preview Properties Pstat Model Pt 36 Q Q Q Q Q Q R R R R R R R	14			
Kramers-Kronig window L L Print Print Print preview Properties Pstat Model Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max Pay Powerpoint® Print P	26	•		
Print Print Print preview Properties Legend Bar 6 Pstat Model Levenberg-Marquardt method 29 Pt 36 Linear Fit 13, 14 Lock checkbox 33 Lower Limit Test Q Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model	17			
Legend Bar Legend Bar Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max Print preview Properties Pstat Model Pt 36 Quick Integrate Quick-Integrate Quick-Integrate R R R R R R R R R R R R R	10	•	29	Kramers-Kronig window
Properties Legend Bar Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max Properties Pstat Model Pt 36 Q Q Q Q Q Q Q Q R Pt 36 Q Q Q Q Q Q Q R R R R R R R R R R R R	6			
Legend Bar Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test Mark Found Peaks Max Current Min/Max 6 Pstat Model Pt 36 Pt 36 Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q Q	6			L
Levenberg-Marquardt method Linear Fit Lock checkbox Lower Limit Test M Mark Found Peaks Max Current Min/Max Pt 36 Pt 36 Q Q Q Q Quick Integrate Quick-Integrate R R R R Randles model	6	•		
Linear Fit Lock checkbox Lower Limit Test M Q Q Q Q Q Quick Integrate Quick-Integrate Quick-Integrate R Mark Found Peaks 7 Max Current 15 Min/Max And Randles model	18			
Lock checkbox Lower Limit Test A Quick Integrate Quick-Integrate Quick-Integrate R Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model		Pt 36		
Lower Limit Test A Quick Integrate Quick-Integrate R Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model		_		
Mark Found Peaks 7 Max Current 15 Min/Max Quick Integrate Quick-Integrate R R		Q		
M Quick-Integrate Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model	21 22 27	Oviola Integrate	31	Lower Limit Test
Mark Found Peaks 7 Max Current 15 Min/Max 21, 24 Randles model	21, 22, 24			М
Max Current 15 Min/Max 21, 24 Randles model		n	7	
Min/Max 21, 24 Randles model		К		
	31	Randles model		
Model 79 Region Raceline	23	Region Baseline	21, 24	Model
Model Editor 29, 30, 38 Region Baseline Settings window	23			
25, 50, 50 Region buseline settings window	41	region buseline settings window	25, 50, 50	

Region Baselines Resistor	21, 23 30	Transform Axes selection	11
Rotate	6	U	
		U	
S		Units tab	37
3		Upper Limit Test	31
Sampling Mode	15	Use Seed Values checkbox	26
Save	32		
Save As	32	V	
Save as Defaults	25	VI 4 - 6	4.0
Save Template	7	Vch AutoRange	18
Save User-Defined Chart Template window Scan Rate	<i>7</i> 15	Vch Filter	18
Seed Values area	24, 26	Vch Offset Vch Offset Enable	18 18
Select Model File window	29, 33	Vch Range	18
Select Portion of Curve using the Keyboard	23, 33 7	Vdc	36
Select Portion of Curve using the Mouse	7	Vertical Grid	6
Select x region	7	Vf 36	Ü
Select y region	7	Visible Traces area	8
Selecting portions of a curve	9	Visual Basic	37
Selection toolbar	9	Vm	36
Selection Toolbar	5 <i>, 7</i>	Vu 36	
Show curve selector	7		
Show Disabled Points	7	W	
Sig 36		**	
Simplex method	29	website	3
Simulate button	38	Wire	30, 31
Simulating an EIS curve	38	$Word^{ ext{ iny B}}$	10
Smooth Data	13, 14		
Spectrum	29	X	
Step Size	15 21	v	
Subtract Impodance	21	X-Axis column	8
Subtract Impedance Subtract Impedance	29		
Subtract Impedance	29	Y	
т		V2 Avis column	o
T		Y2-Axis column Y-Axis column	8 8
T 36		Yimag	36
Tafel constants	24, 25	Yreal	36
Tafel Fit	9, 26	rredi	30
Tafel Fit function	9	7	
Tafel Fit window	26	Z	
Tafel tab	27	Z-clustered	6
Test Compile button	32	Zimag	35, 36
Test Identifier	15	Zmod	36
Time	15	Zoom	6
toolbars	5	Zphz	36
Tools	6, 32	Zreal	35, 36
Tools.	37		
Transform Axes	14		